Quick installation for NCP-X1

1. Connect the NCP-X1 with NSCaster X1 by the provided USB cable.

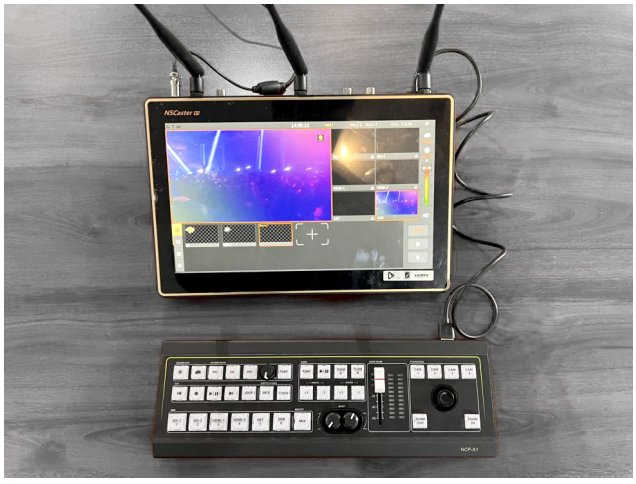

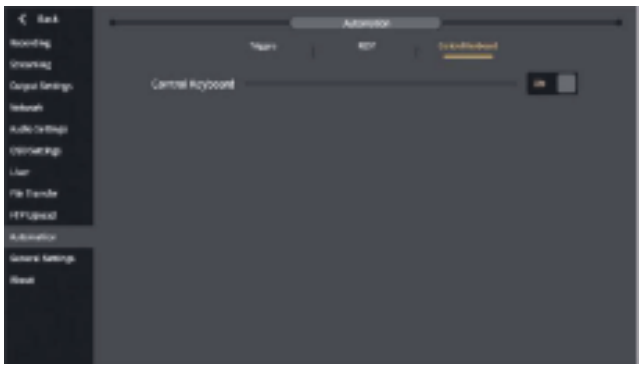

2. In the NSCaster X1 Settings, under the tab of Automation, select the enable button so it is displayed as 'ON' .

3. The LED of the keys will initialize and stay on according the status. Now it can be used to control the NSCaster X1.